


Sensor connection (Optional)

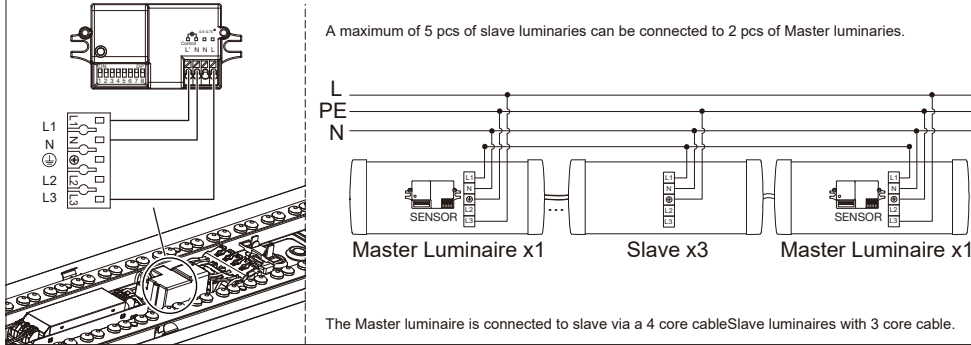

Sensor Settings

1. Detection Area

Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.

I – 100%	● ●	100%
II – 75%	● ○	75%
III – 50%	○ ●	50%
IV – 25%	○ ○	25%

2. Hold-time

Hold-time refers to the time period that the light remains 100% on if no more movement is detected.

I – 5s	● ● ●	5s
II – 30s	● ● ○	30s
III – 1min	● ○ ●	1min
IV – 3min	● ○ ○	3min
V – 5min	○ ● ●	5min
VI – 10min	○ ● ○	10min
VII – 20min	○ ○ ●	20min
VIII – 30min	○ ○ ○	30min

3. Daylight threshold

Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.

I – 2Lux	● ● ●	2Lux
II – 10Lux	● ● ○	10Lux
III – 25Lux	○ ● ○	25Lux
IV – 50Lux	● ○ ○	50Lux
V – Disable	○ ○ ○	Disable


IMPORTANT SAFETY NOTES



WARNING
RISK OF ELECTRIC SHOCK

BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- The installation and connection of the luminaire must be done when switched off and by qualified people. Make sure no voltage while installation.

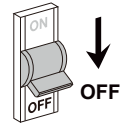

CAUTION


MAINTENANCE

- To avoid injuries, disconnect power to the light and allow the unit to cool down before performing maintenance.
- Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on an annual basis. Frequency of use and environment should determine this.
- The Covers should be cleaned periodically as needed to ensure continued photometric performance. Clean the Cover with a damp, non-abrasive, lintfree cloth. If not sufficient, use mild soap or a liquid cleaner. Do not use an abrasive, strong alkaline or acid cleaner as damage may occur.
- Inspect the topside on the luminaire to ensure that it is free of any obstructions or contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth if needed.




This product contains a light source of energy efficiency class D.

Products

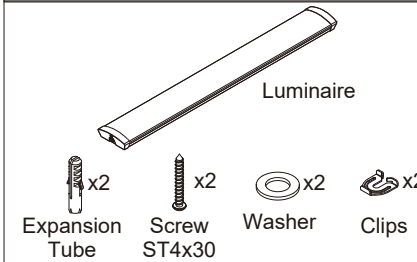


Optional

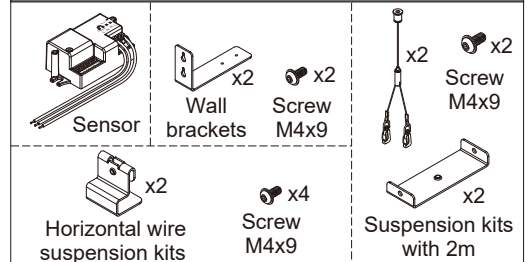


Dimensions

[mm]

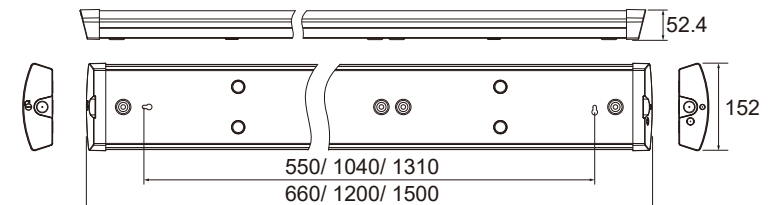


Installation Steps


1 Twist the latch to remove the optical cover

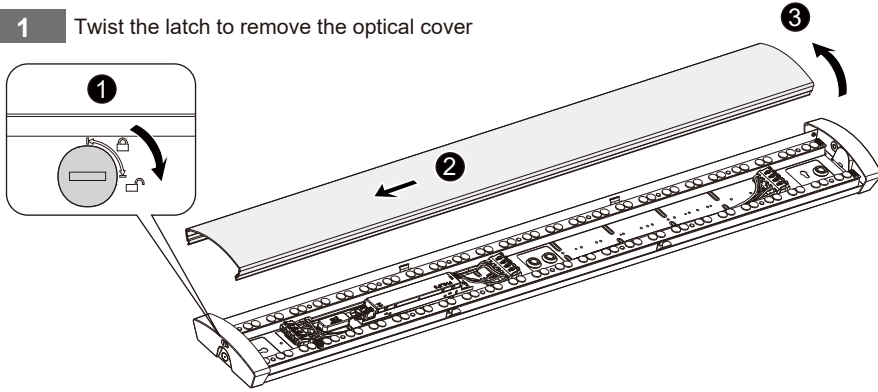


2-a Ceiling-mounted Installation

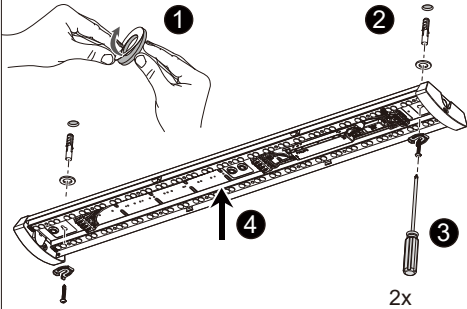


2-b Suspension kits Installation

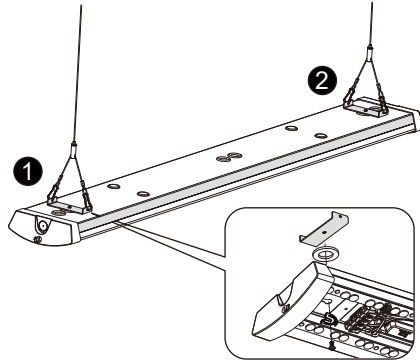

2-c Wall-mounted installation

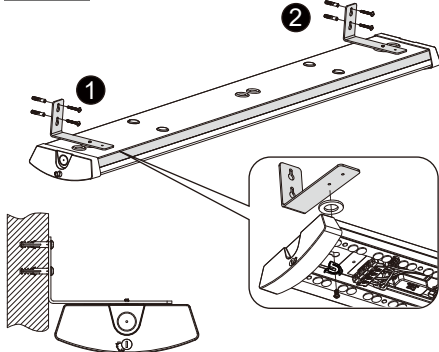

2-d Wire rope suspension installation

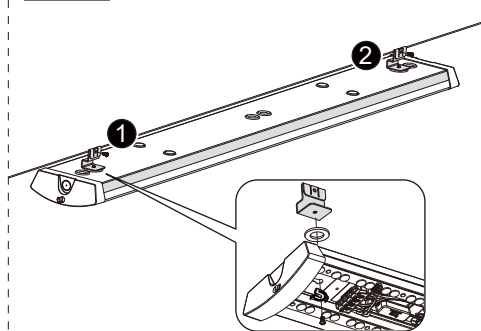


Installation Steps

3 CCT Setting (Optional)




It is not allowed to switch CCT switch under live state



CCT Setting (A)
External
DIP switch

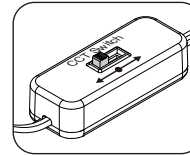

CCT Setting (B)
Dipswitch
on Driver

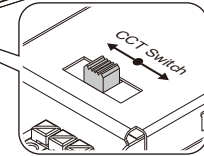


4 Snap the optical cover into both ends in sequence and tighten the latch.

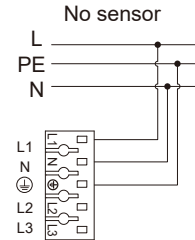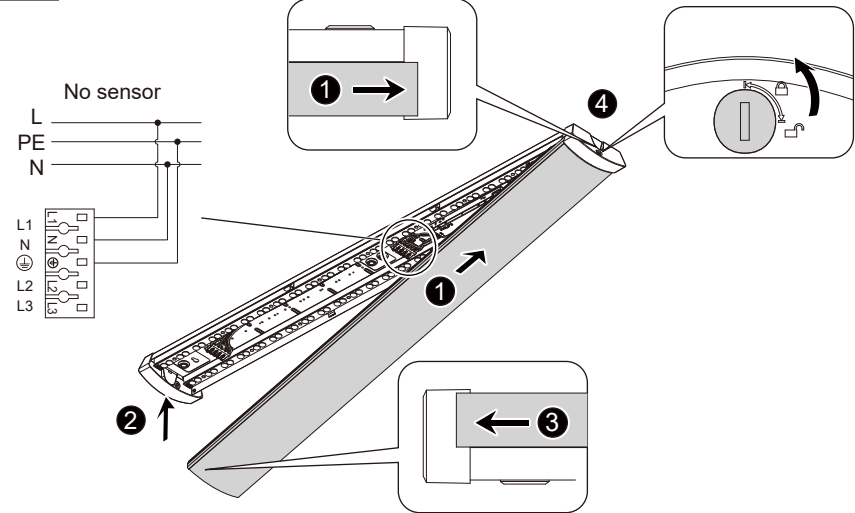

5 Connecting Power Supply

Cable Standard
H05RN-F or H07RN-F Cable Standard

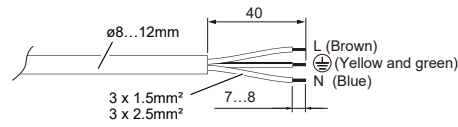

Cable Standard
H05RN-F or H07RN-F Cable Standard

